

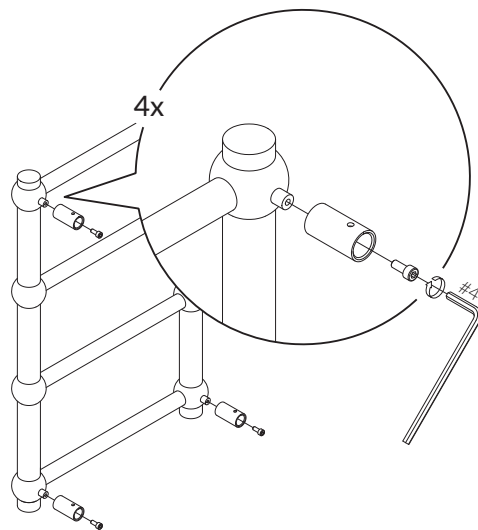



4

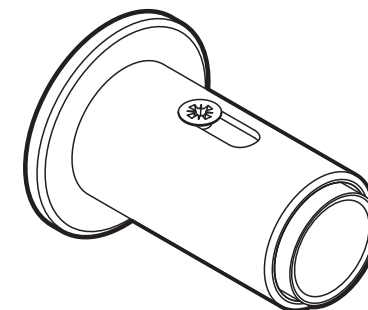

5

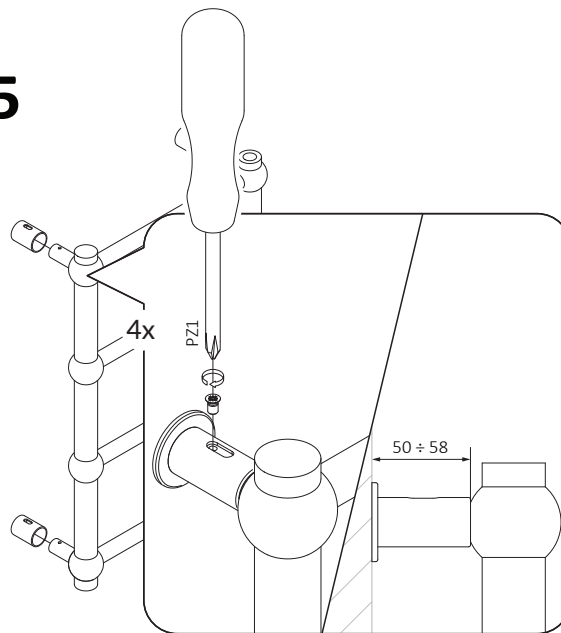

6 a/b/c*


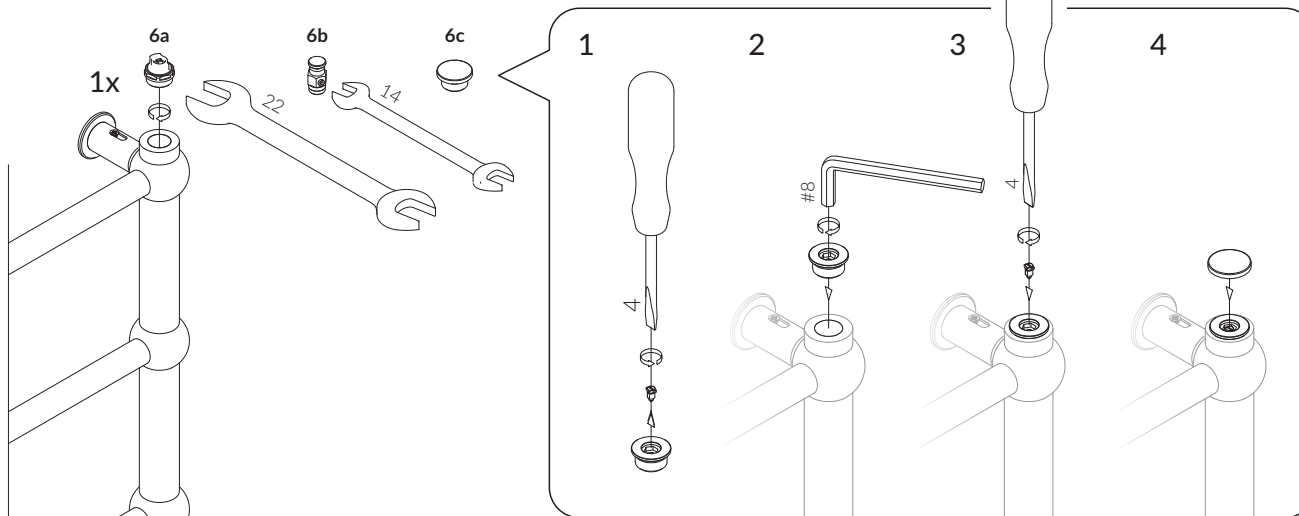


User Manual


Mounting bracket RTP

4x


- PL** Instrukcja montażu – mocowanie RTP
- CS** Pokyny k instalaci – konzole zmien na montážní profily RTP
- DE** Montageanleitung – Wandhalterung RTP
- ES** Instrucción de montaje – soportes RTP
- FR** Instruction du montage – Support de montage RTP
- IT** Manuale d'uso – staffa di fissaggio RTP
- NL** Gebruiksaanwijzin – muur bevestiging RTP
- RU** Инструкция монтажа – креплений RTP
- SK** Pokyny k inštalácii – montážne profily RTP

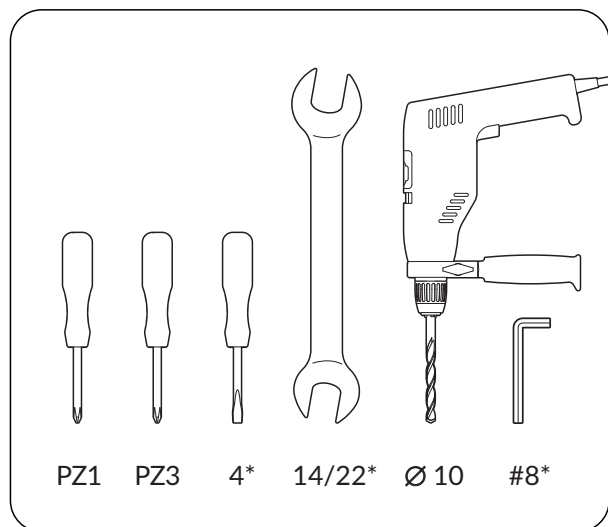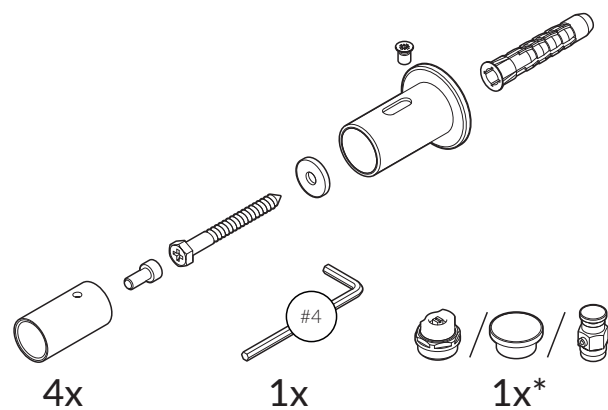


- * **EN** Refers to water and dual fuel version
PL Dotyczy wersji wodnej i wodno-elektrycznej
CS Týká se vodní a hydroelektrické verze.
DE Betrifft die Wasser- und Wasser-Elektrischen Versionen
ES Se refiere a la versión de agua y mixta
FR Concerne la version hydraulique et mixte
IT Si riferisce alla versione idronica e mista.
NL Betreft zowel water- als water/elektrisch verwarmde versies
RU Касается версии водной и водно-электрической
SK Týka sa vodnej a hydroelektrickej verzie.

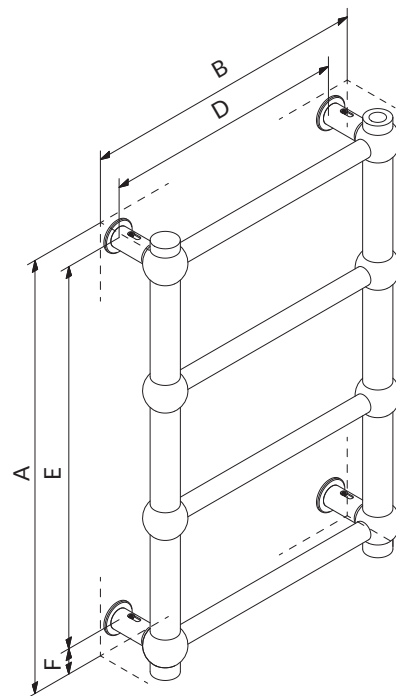

2

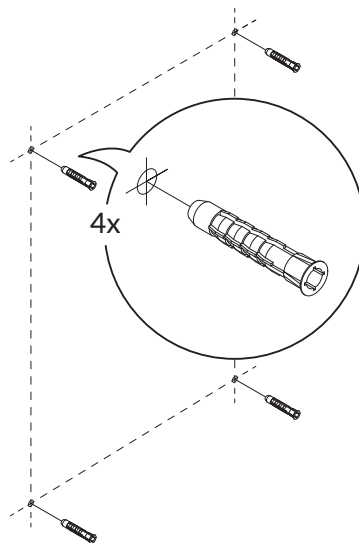

1

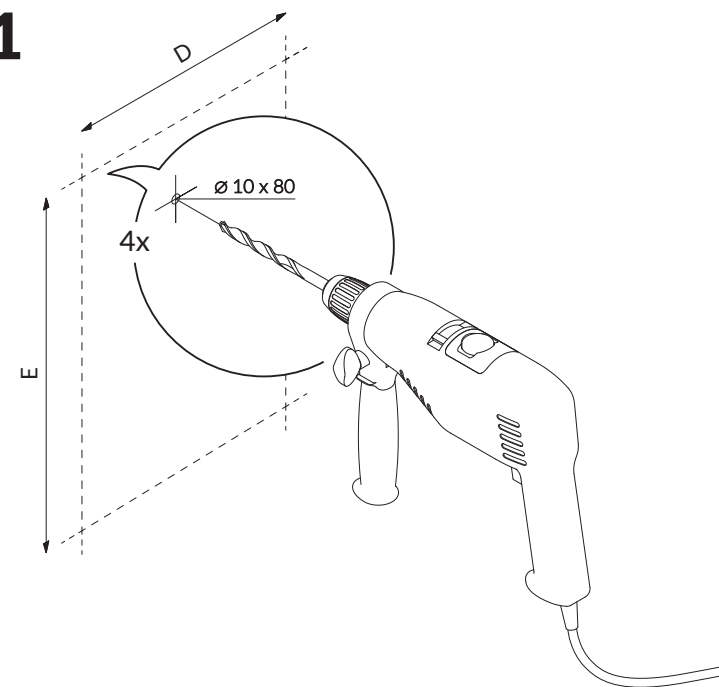

3

